

Fig. 1


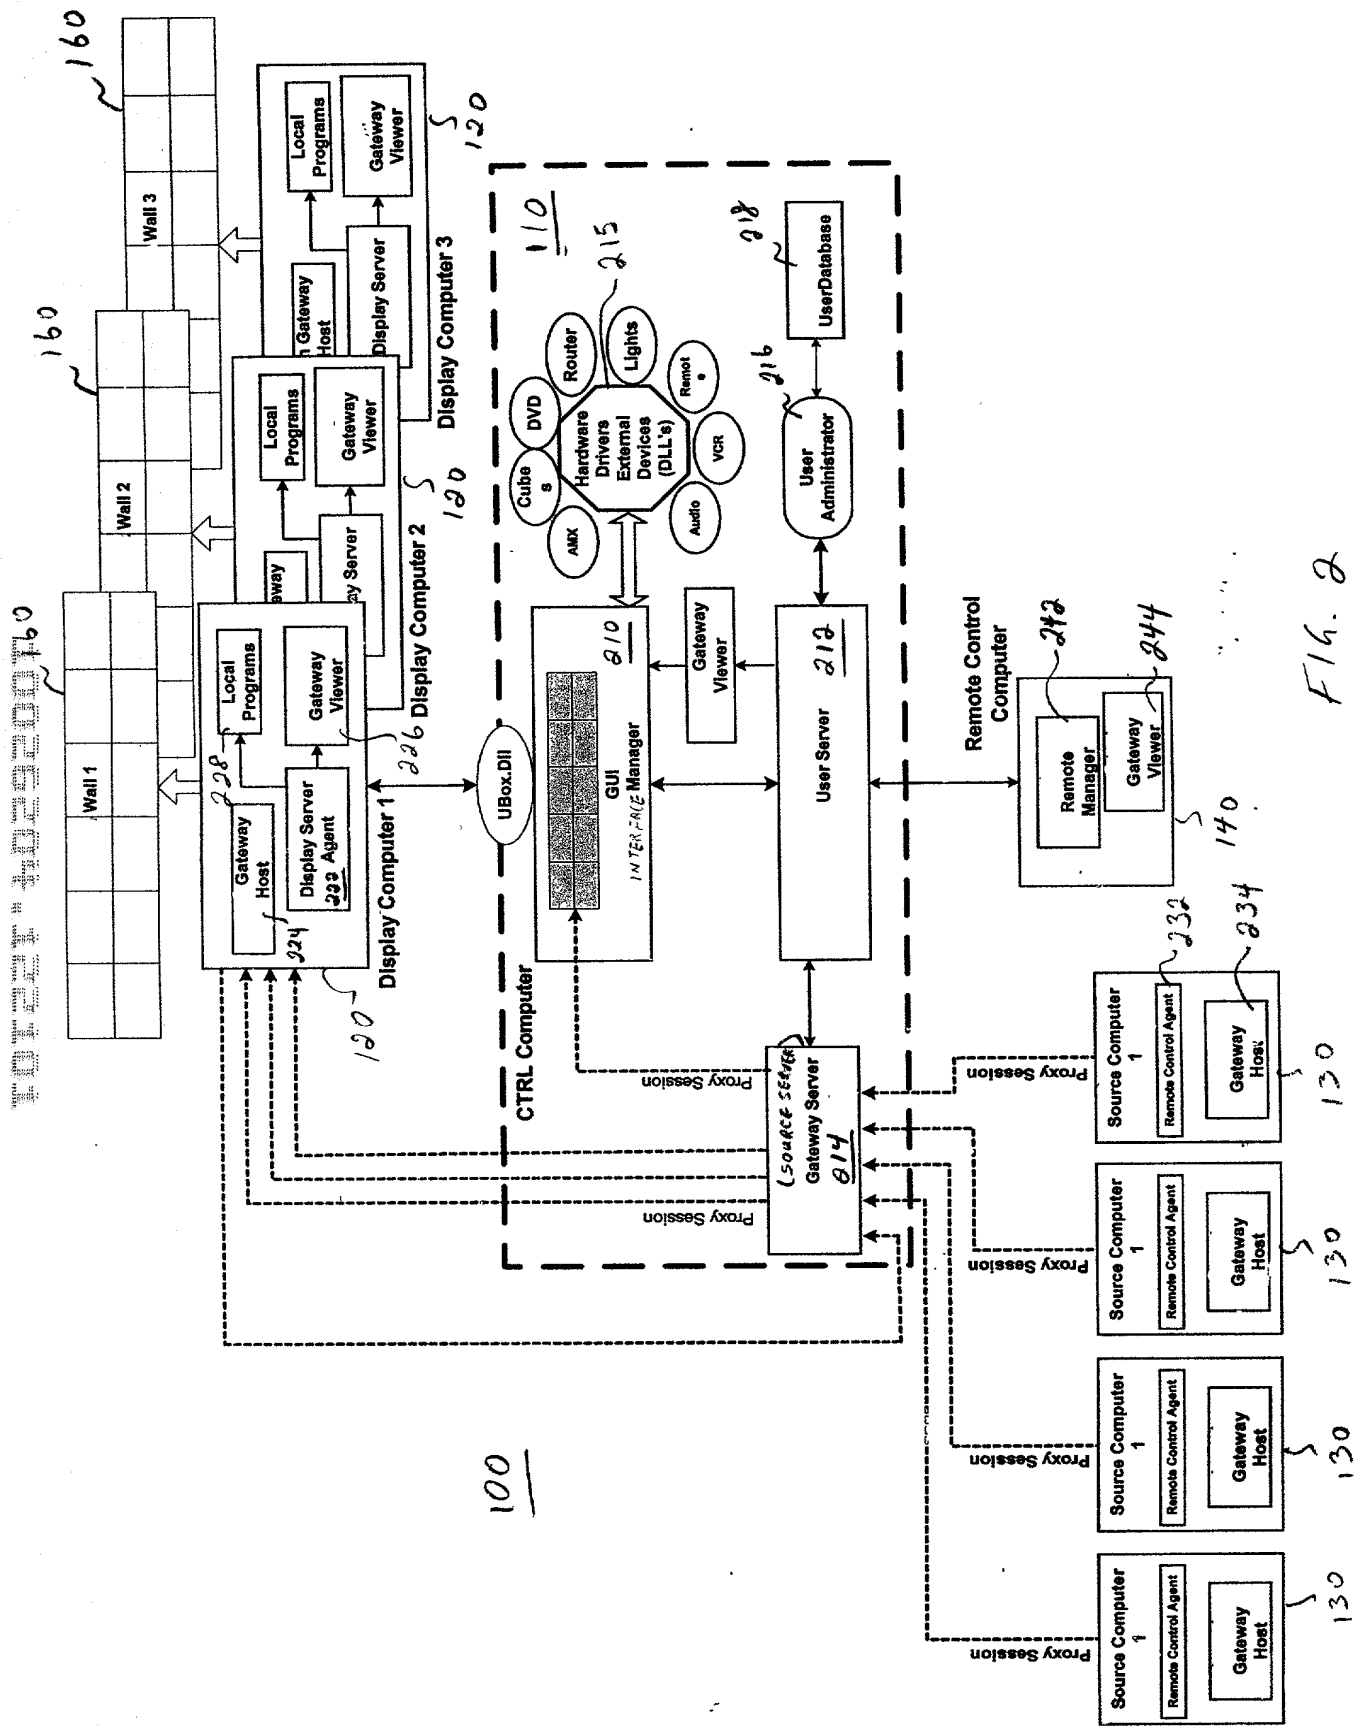


FIG. 2

FIG. 3

DCOM Connection
UDP Sockets Connection

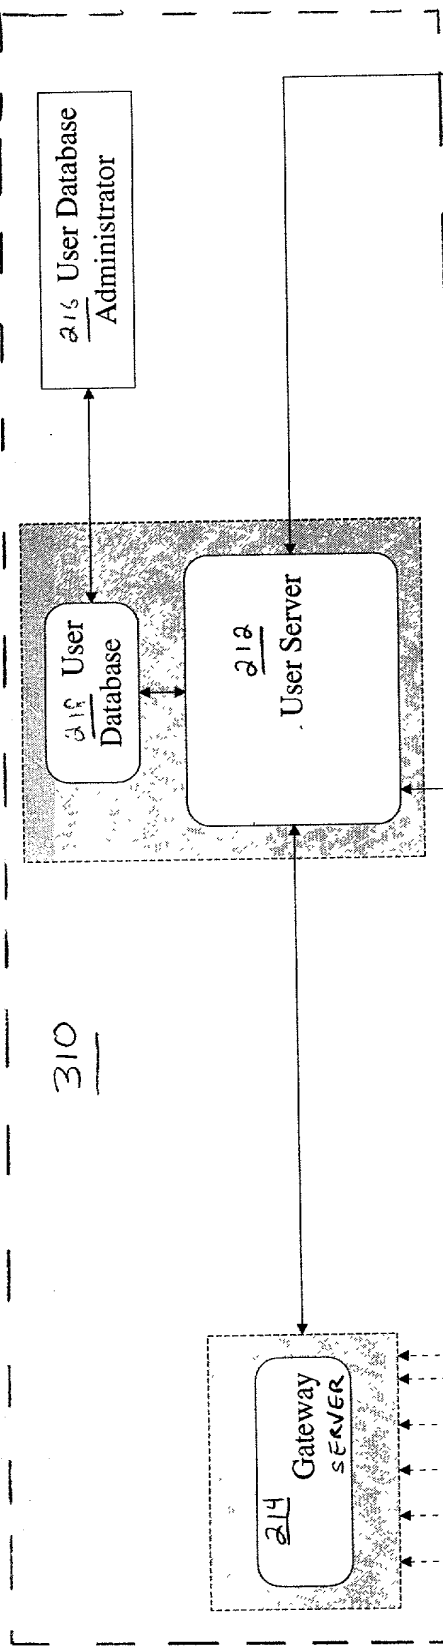

300


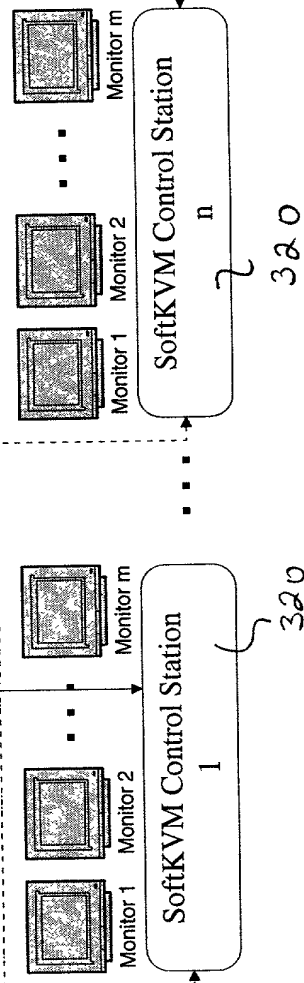


Fig. 3




330

1012216 400

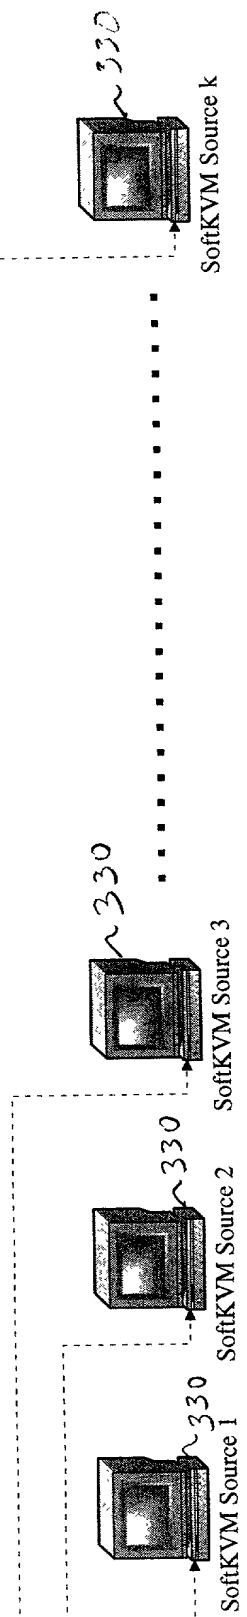

3) Activu Manager
File Logon Goto Macro Options Help

Options ViewScreen 1 < >

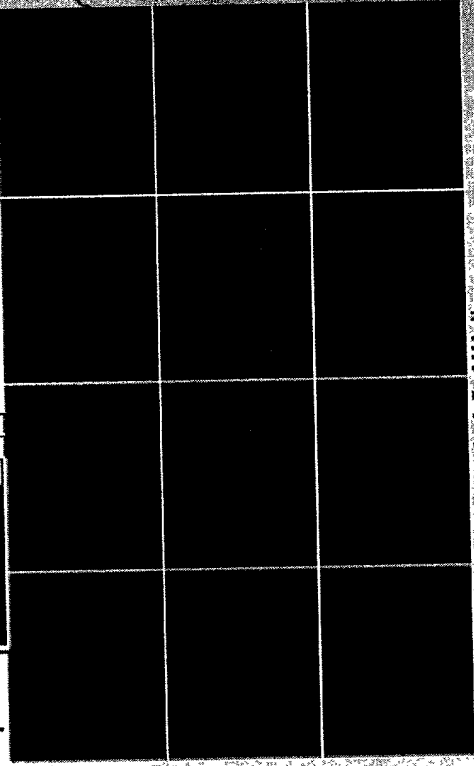

Left 3x4 Wall 10 NetVista

Left 3x4 First 2x3



Clear Wall	Device Setup
Macro Page	Auto
Eresets	Preset Page

Available Sources (Win32 Source) NetVista

Source Number	40
Type	Source Computer
Name	NetVista
Description	Source Comp. 4

Sizes

1:1	1:1
1x1	NetVista
2x2	4x3
2x1	

410

424


420

2112

Options ViewScreen1 < >

ViewScreen 1


Options

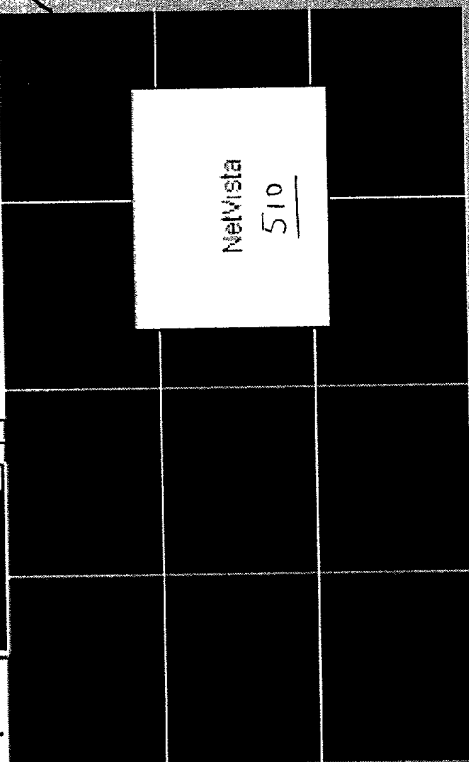

Left 3x4 Wall

Erweitert

11

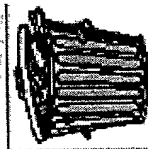

Device Setup

Press Page

Available Sources

(windows Source) NetVista

Source Number: 40

Type :

Nome .

Description

Source Computer

NetVista

Source Comp. 4

5413

11

Netvista

423

empty_walring - Paint


Active Manager

Start | File Control Panel

empty_walring - Paint

2) Activa Manager
File Login Goto Macro Options Help


Options ViewScreen 1

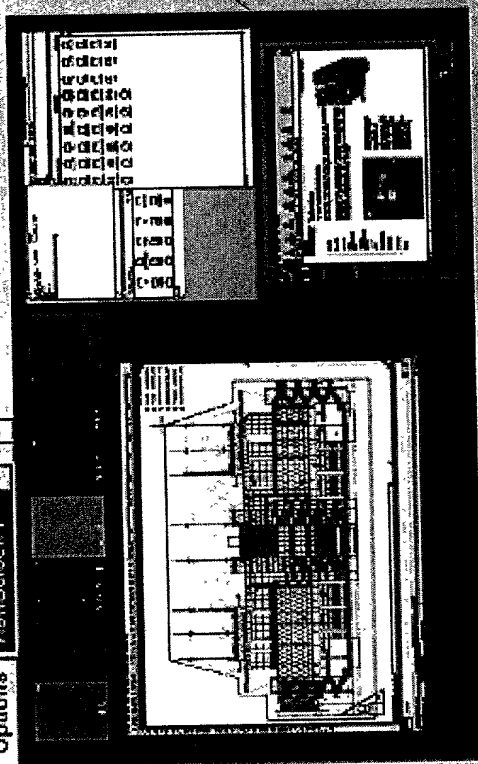

Left 3x4 Wall

Left 3x4

Front 2x3

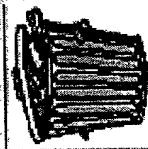

actvu

Clear Wall

Device Setup

Macro Page

Auto 3

Presets

Preset Page

Available Sources

(Unix Source) UNIX_A

Source Number: 43

Type: Source Computer

Name: UNIX_A

Description: Sun Solaris

Sizes

1:1

1X1

2X2

2X1

1:1

UNIX_A

